


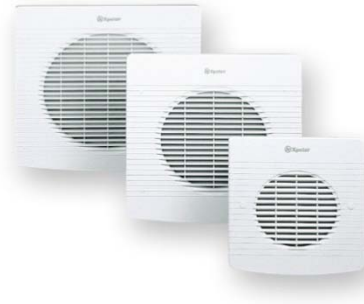

United States

Alternative mounting instructions for the Models WX6, WX9 & WX12 – wall mounted fans:

Xpelair's WX wall mounted fans can be installed with metal ladder strips included with the product, and as described in the enclosed instructions, or via this alternative method, which may be easier.



Step 1: Frame the rough-in hole, including the interior finish (i.e. drywall), such that the inside dimensions equal:

WX6	9.5" wide x 10.5" high
WX9	13.5" wide x 14.75" high
WX12	17.25" wide x 17.25" high

Step 2: Center the black exterior weather grill over exterior opening and attached with screws provided. Should your installation require, caulk the top and sides of the grill (caulk supplied by others),

Step 3: FOR MODEL WX6 FAN ONLY: Insert the black interior mounting box into the rough-in opening and attached with screws provided (flange of rough-in box should rest on the surface of the finished wall). Assemble black plastic tube liner and insert into the mounting box, being careful to overlap and align with ring on exterior weather grill. Mark the tube liner flush with the inner face of the mounting box and cut to fit. Attach the fan assembly to the mounting box, which will hold the tube liner in place.

- or -

Step 3: FOR MODEL WX9 & WX12 ONLY: Measure the depth of the wall opening (to the surface of the finished wall) and cut the white wall sleeve (included in packaging) to following length:

- For WX9 – cut sleeve 3-3/8" less than wall opening depth
- For WX12 – cut sleeve 5-1/8" less than wall opening depth

Attach sleeve to back lip of black fan mounting box and insert assembly into the opening, being careful to align sleeve with exterior weather grill. Secure mounting box assembly to the finished wall with screws (included in package). Continue with installation of fan assembly.

fresh air pure and simple